






 








 







Originalfernbedienung Ersatzfernbedienung

|   |            |   |                          |
|---|------------|---|--------------------------|
|    | Power      |    | Power                    |
|    | Mute       |    | Mute / Dimmer            |
|    | Picture    |    | Picture / Format         |
|    | Sound      |    | Sound / Title            |
|    | Aspect     |    | Shift + Picture / Format |
|    | Sleep      |    | Sleep / Timer            |
|    | Subtitle   |    | Subtitle / EQ            |
|    | CH. List   |    | Smart / List             |
|    | EPG        |    | Guide / EPG / -/--       |
|    | FAV        |    | Fav / Marker / PC        |
|   | TV / Radio |   | TV/Radio /               |
|  | Up         |  | Up                       |
|  | Input      |  | AV / Input / RDS         |
|  | Left       |  | Left                     |
|  | OK         |  | OK                       |
|  | Right      |  | Right                    |
|  | Menu       |  | Menu / Home              |

Originalfernbedienung Ersatzfernbedienung

|   |           |   |                       |
|---|-----------|---|-----------------------|
|    | Down      |    | Down                  |
|    | Exit      |    | Exit / Cancel / Clear |
|    | 1         |    | 1                     |
|    | 2         |    | 2                     |
|    | 3         |    | 3                     |
|    | 4         |    | 4                     |
|    | 5         |    | 5                     |
|    | 6         |    | 6                     |
|    | 7         |    | 7                     |
|    | 8         |    | 8                     |
|   | 9         |   | 9                     |
|  | 0         |  | 0                     |
|  | Recall    |  | Back / Return         |
|  | Info      |  | Info / Angle          |
|  | Vol +     |  | Vol+                  |
|  | Rec       |  | Rec / Rec Mode        |
|  | Rec. List |  | Display / Media       |

 





Originalfernbedienung Ersatzfernbedienung

|   |              |   |                               |
|---|--------------|---|-------------------------------|
|    | CH +         |    | CH+ / Page+                   |
|    | Vol -        |    | Vol-                          |
|    | Play / Pause |    | Play / Slow                   |
|    | Play / Pause |    | Pause / Step / Freeze         |
|    | Stop         |    | Stop / Hold                   |
|    | CH -         |    | CH- / Page-                   |
|    | Red          |    | Red / Netflix / Search        |
|    | Green        |    | Green / APP / Repeat          |
|    | Yellow       |    | Yellow / YouTube / Repeat     |
|    | Blue         |    | Blue / Prime Video / Random   |
|   | TV / TXT     |   | Text / Goto                   |
|  | Cancel       |  | Shift + Exit / Cancel / Clear |
|  | Reveal       |  | Eject / Surround              |
|  | Nicam / A2   |  | Audio / Lang I/II             |
|  | << / Index   |  | << / Tune-                    |
|  | >> / Hold    |  | >> / Tune+                    |
|  | I<< / Size   |  | I<< / Preset-                 |

Originalfernbedienung Ersatzfernbedienung

|   |               |   |               |
|---|---------------|---|---------------|
|  | >>I / Subpage |  | >>I / Preset+ |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |
|   |               |   |               |

