
 

 
 













 

 

 



 
 
 
 

 

 
 


| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---|-----------------------|---------------------|
| On/Off |  | Power | |
| Mute |  | Mute | |
| Update |  | Smart | |
| Reveal |  | Media | |
| Subt.List |  | Subt | |
| Sleep Timer |  | Sleep | |
| Txt Stop |  | Stop | |
| Info |  +  | Shift + Info | |
| Return TV |  | TV/R | |
| Menu video |  | D. Menu | |
| Text |  | Text | |
| Txt Expand |  | Eject | |
| TV/AV |  | AV | |
| Menu |  | Menu | |
| Menu Up |  | Up | |
| Display |  | Info | |
| Menu Left |  | Left | |
| OK Enter |  | Ok | |
| Menu Right |  | Right | |
| Menu Off |  | Exit | |
| Menu Down |  | Down | |
| Back |  | Back | |
| Volume+ |  | Vol + | |
| Chan.Up |  | Ch + | |
| Volume- |  | Vol - | |
| Menu audio |  | Dual | |
| Chan.Down |  | Ch - | |
| 1 |  | 1 | |
| 2 |  | 2 | |
| 3 |  | 3 | |
| 4 |  | 4 | |
| 5 |  | 5 | |
| 6 |  | 6 | |
| 7 |  | 7 | |



| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---|-----------------------|---------------------|
| 8 |  | 8 | |
| 9 |  | 9 | |
| Guide +/- 1. |  | Guide | |
| 0/10 |  | 0 | |
| 2.Fav P/C 2. |  | Pre Ch | |
| Red |  | Red | |
| Game Coo |  | 3D | |
| Green |  | Green | |
| Yellow |  | Yellow | |
| Blue |  | Blue | |
| Contrast+ |  | Shift + Ch + | |
| Contrast- |  | Shift + Ch - | |
| Mix Scan |  | Shift + Text | |
| Surround |  | Shift + Red | |
| Audio- |  | l<< | |
| Audio+ |  | Shift + >>l | |
| Tone- |  | << | |
| Tone+ |  | >> | |
| Nicam/Mono |  | Shift + Green | |
| Level L |  | Shift + Yellow | |
| Level R/Woofer |  | Shift + Blue | |

