
 
 
 

 




 




 
 
 
 


 




**Originalfernbedienung Ersatzfernbedienung**

|             |   |               |
|-------------|---|---------------|
| On/Off      |    | Power         |
| Next        |    | >>I           |
| Audio Out   |    | Mute          |
| Slow Down   |  +      | Shift + <<    |
| F.Adv       |  +      | Shift + Media |
| Mon/TV      |    | Subt          |
| Sp/Lp/Speed |    | Eject         |
| Stop        |    | Stop          |
| Slow/Dpss-  |  +      | Shift + Ch -  |
| Auto/Track  |    | Smart         |
| Video/Go-To |    | D. Menu       |
| Slow/Dpss+  |  +  | Shift + Ch +  |
| Pause       |    | Pause         |
| Menu        |    | Menu          |
| VCR/TV      |    | Media         |
| Menu Up     |    | Up            |
| Display     |    | Info          |

**Originalfernbedienung Ersatzfernbedienung**




 
 

 
 
 

 

 


 
|             |   |       |
|-------------|---|-------|
| Menu Left   |    | Left  |
| OK Enter    |    | Ok    |
| Menu Right  |    | Right |
| Exit        |    | Exit  |
| Menu Down   |    | Down  |
| T.Set/Clock |    | Back  |
| Tracking+   |    | Vol + |
| Tracking-   |    | Vol - |
| Prev.       |    | I<<   |
| Audio       |    | Dual  |
| 1           |  | 1     |
| 2           |  | 2     |
| 3           |  | 3     |
| 4           |  | 4     |
| 5           |  | 5     |
| 6           |  | 6     |
| 7           |  | 7     |



Originalfernbedienung Ersatzfernbedienung

|               |   |               |
|---------------|---|---------------|
| 8             |    | 8             |
| 9             |    | 9             |
| -/--          |    | Guide         |
| 0             |    | 0             |
| Progr/C/CH    |    | Pre Ch        |
| Store         |  +      | Shift + Smart |
| Rewind        |    | <<            |
| Case Tape     |    | 3D            |
| Next Sv+V     |  +      | Shift + >>I   |
| Play          |   | Play          |
| Vps/Pdc       |    | Format        |
| F.Forward     |    | >>            |
| Search Index  |    | TV/R          |
| Record        |    | Rec           |
| Encode        |    | Options       |
| On/Off        |  +  | Shift + Power |
| Counter Clock |    | Red           |

Originalfernbedienung Ersatzfernbedienung

|               |   |              |
|---------------|---|--------------|
| Counter/Memor |    | Green        |
| Input Source  |    | AV           |
| Counter Reset |    | Yellow       |
| Skip/Search   |  +  | Shift + TV/R |
| Info/Intro    |  +  | Shift + Info |
| Repeat        |    | Text         |
| Audio Dub     |  +  | Shift + Dual |
| Frame Up      |    | Ch +         |
| Timer/Record  |  +  | Shift + AV   |
| Frame Down    |   | Ch -         |
| Timer/Sleep   |    | Sleep        |
| X2 Rew/Play   |    | List         |
|               |   |              |
|               |   |              |
|               |   |              |
|               |   |              |
|               |   |              |
|               |   |              |
|               |   |              |
|               |   |              |
|               |   |              |

