



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	VCR	+	Shift + 2
	DVD	+	Shift + 1
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input Select		AV
	Display / CLK/CNT		Info
	Open/Close / Eject		Eject
	TV / VCR		TV/R

Originalfernbedienung Ersatzfernbedienung

	Clear / Count. Reset		Exit
	Blank Search		Green
	Top Menu	+	Shift + Menu
	Menu		Menu
	Return		Back
	Zoom	+	Shift + Eject
	Angle		Format
	Subtitle		Subt
	Audio		Dual
	Instant Replay	+	Shift + Play
	Play		Play
	<< REW		<<
	FWD >>		>>
	Slow	+	Shift + Pause
	Stop		Stop
	Pause Step / Still		Pause
	I<< Skip		I<<



