


 










 



 



 





 



 



 

 






Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	Source		AV / Input / RDS
	Menu		Menu / Home
	Guide		Guide / EPG / -/--
	Tv/Fav/Radio		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Tv/Fav/Radio		TV/Radio /
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	P +		CH+ / Page+
	P -		CH- / Page-
	Vol-		Vol-
	Vol+		Vol+
	Aspect		Picture / Format
	→ [/] ←		Zoom / Size
	Index / [i+]		Info / Angle
	Text / Mix		Text / Goto
	[▼]		Smart / List
	Dual I/II		Audio / Lang I/II



