



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | Power |  | Power |
|  | Open / Close |  | Eject |
|  | Audio |  | Dual |
|  | Subtitle |  | Subt |
|  | Angle |  | Format |
|  | Search |  | TV/R |
|  | PRG |  | Red |
|  | CLR |  | Exit |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|---------|
|  | 0 |  | 0 |
|  | Video Out |  | AV |
|  | Display |  | Info |
|  | Dimmer |  | Blue |
|  | Title |  | Smart |
|  | Mode |  | List |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Menu |  | Menu |
|  | Setup |  | Options |
|  | Card / DVD |  | Media |
|  | << |  | << |
|  | >> |  | >> |
|  | Play |  | Play |
|  | Stop |  | Stop |



