 


 




 
 

 



 


 
 

 




 
 

 









 
 

 
 


 
 
 
 
 

 
 
 
 



 



 








Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Standby / On	 Power	 Clear	 Exit
 Open / Close	 Eject	 Setup	 Options
 1	 1	 Title	 Info
 2	 2	 Menu	 Menu
 3	 3	 Enter	 Ok
 4	 4	 Up	 Up
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Left	 Left
 8	 8	 PBC	 Smart
 9	 9	 Play	 Play
 0	 0	 Zoom	 Shift + Eject
 10+	 Guide	 Repeat	 Text
 Goto	 Pre Ch	 Pause	 Pause
 Audio	 Dual	 A-B	 Shift + Text
 Subtitle	 Subt	 Prog	 Sleep
 Angle	 Format	 OSD	 Red





Originalfernbedienung Ersatzfernbedienung

	Rev		<<
	Fwd		>>
	Prev		I<<
	Next		>>I
	Step	+	Shift + Pause
	Stop		Stop
	Slow	+	Shift + Play
	Mute		Mute
	R/L		Yellow
	Reset		Back
	N/P		Blue
	DVD / USB		Media
	Vol +		Vol +
	Vol -		Vol -
	Video		AV

Originalfernbedienung Ersatzfernbedienung