



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Source |  | AV / Input / RDS |
|  | 0 |  | 0 |
|  | Info |  | Info / Angle |
|  | DMP |  | D.Menu / Top |
|  | Up |  | Up |
|  | EPG |  | Guide / EPG / -/-- |













 

 




 



 





 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|------------------------|
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Vol + |  | Vol+ |
|  | List |  | Smart / List |
|  | CH + |  | CH+ / Page+ |
|  | Vol - |  | Vol- |
|  | CH - |  | CH- / Page- |
|  | Fav |  | Fav / Marker / PC |
|  | Sleep |  | Sleep / Timer |
|  | Index |  | Display / Media |
|  | Recall |  | Back / Return |
|  | Red / << |  | Red / Netflix / Search |
|  | Red / << |  | << / Tune- |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|-------------------------------|
|  | Green / >> |  | >> / Tune+ |
|  | Green / >> |  | Green / APP / Repeat |
|  | Yellow / I<< |  | I<< / Preset- |
|  | Yellow / I<< |  | Yellow / YouTube / Repeat |
|  | Blue / >>I |  | Blue / Prime Video / Random |
|  | Blue / >>I |  | >>I / Preset+ |
|  | Text / Play/Pause |  | Text / Goto |
|  | Text / Play/Pause |  | Pause / Step / Freeze |
|  | Text / Play/Pause |  | Play / Slow |
|  | Stop / Still |  | Stop / Hold |
|  | Timer / Subtitle |  | Subtitle / EQ |
|  | Size / Aspect |  | Zoom / Size |
|  | Cancel [=X] |  | Shift + Exit / Cancel / Clear |
|  | Radio |  | TV/Radio / |
|  | Audio / I/II |  | Audio / Lang I/II |
|  | Rec |  | Rec / Rec Mode |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | [≡?]/Source |  | AV / Input / RDS |
|  | 0 |  | 0 |
|  | [≡i]/Info |  | Info / Angle |
|  | DMP |  | D.Menu / Top |
|  | Up |  | Up |
|  | EPG |  | Guide / EPG / -/-- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|------------------------|
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Vol+ |  | Vol+ |
|  | List |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | CH- |  | CH- / Page- |
|  | ♥ |  | Fav / Marker / PC |
|  | Sleep |  | Sleep / Timer |
|  | Index |  | Display / Media |
|  | Back |  | Back / Return |
|  | Red |  | Red / Netflix / Search |
|  | << |  | << / Tune- |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|-----------------------------|
| | Green | | Green / APP / Repeat |
| | >> | | >> / Tune+ |
| | Yellow | | Yellow / YouTube / Repeat |
| | l<< | | l<< / Preset- |
| | Blue | | Blue / Prime Video / Random |
| | >>l | | >>l / Preset+ |
| | Play | | Play / Slow |
| | Pause | | Pause / Step / Freeze |
| | [≡] | | Text / Goto |
| | Stop/Still | | Stop / Hold |
| | [≡+] | | Picture / Format |
| | [≡o]/Subtitle | | Subtitle / EQ |
| | [≡◇]/[+] | | Zoom / Size |
| | [≡x] | | Setup / OPT / |
| | Radio | | TV/Radio / |
| | Audio | | Audio / Lang I/II |
| | Rec | | Rec / Rec Mode |

