
 
 

 

 
 





 


 








**Originalfernbedienung    Ersatzfernbedienung**

	Standby/On		Power
	Open/Close		Eject
	Audio		Dual
	Subtitle		Subt
	Angle		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Ok

**Originalfernbedienung    Ersatzfernbedienung**

	Top Menu		Shift + Menu
	Menu		Menu
	Home Menu		Smart
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Pre Ch
	<</</<		<<
	Play		Play
	>/ >/>>		>>
	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	Play Mode		Shift + Play



