 

 

























Originalfernbedienung    Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	CD		3
	USB		8
	SD Card		AV / Input / RDS
	Tuner		6
	Aux		7
	CASS		Yellow / YouTube / Repeat
	EQ		Subtitle / EQ
	Up		CH+ / Page+
	Up		Up
	-		Left
	-		Vol-
	Play / Pause		Pause / Step / Freeze
	Play / Pause		Play / Slow
	+		Right
	+		Vol+

Originalfernbedienung    Ersatzfernbedienung

	Down		CH- / Page-
	Down		Down
	Sleep		Sleep / Timer
	Display		Display / Media
	I<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>		>>  / Preset+
	Prog		TV/Radio /
	Rep		Green / APP / Repeat
	Rand		Blue / Prime Video / Random
	Stop		Stop / Hold

