



Originalfernbedienung Ersatzfernbedienung

PP	PP	RETURN BACK	Back / Return
	Power		Power
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
P<P	P<P	PC FAV MARKER	Fav / Marker / PC
0	0	HDMI - SAT 0	0
--	--	GUIDE EPG	Guide / EPG / -/--
	Menu [M]	HOME MENU	Menu / Home
	Info [i]	ANGLE INFO	Info / Angle
I-II	I-II	LANG I/II AUDIO	Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Mute	DIMMER MUTE	Mute / Dimmer
	Left		Left
	Up		Up
	Right		Right
OK	OK	OK	OK
	Down		Down
V -	V -	VOL -	Vol-
V +	V +	VOL +	Vol+
P -	P -	CH - PAGE	CH- / Page-
P +	P +	CH + PAGE	CH+ / Page+
	Red / Sound	NETFLIX SEARCH	Red / Netflix / Search
	Red / Sound	TITLE SOUND	Sound / Title
	Green / Picture	APP REPEAT	Green / APP / Repeat
	Green / Picture	FORMAT PICTURE	Picture / Format
	Yellow / Feature	YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Blue / Install	Prime Video RANDOM	Blue / Prime Video / Random
	Text	GOTO TEXT	Text / Goto



