






 

 

 



 

 

 
 

 
 

 







 





 

 

 



 





 







 







Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Dimmer		Shift + Mute / Dimmer
	Sleep		Sleep / Timer
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Stop		Stop / Hold
	Prog/Freq/Text		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

	Pause/PTY Seek		Pause / Step / Freeze
	Random/PTY Seek Start		Blue / Prime Video / Random
	I<</Preset		I<< / Preset-
	Play		Play / Slow
	>>I/Preset Up		>>I / Preset+
	GUI		Smart / List
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Set Up		Setup / OPT /
	Down		Down
	Top		Back / Return
	Top		D.Menu / Top
	Mute		Mute / Dimmer
	Volume+		Vol+



Program



Originalfernbedienung Ersatzfernbedienung

	Night		Display / Media
	Volume-		Vol-
	EQ	+	Shift + Subtitle / EQ
	TV	+	Shift + 1
	DVD/CD	+	Shift + 2
	DVD/CD	+	Shift + 3
	Direct		AV / Input / RDS
	AUX	+	Shift + 7
	Tuner	+	Shift + 6
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Zoom		Zoom / Size
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV CH+		CH+ / Page+
	TV CH-		CH- / Page-
	TV Input		AV / Input / RDS
	TV Vol+		Vol+
	TV Vol-		Vol-
	TV		Shift + 1

Originalfernbedienung Ersatzfernbedienung

	DVD/CD		Shift + 3
	DVD/CD		Shift + 2
	AUX		Shift + 7
	Tuner		Shift + 6





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Prog/Freq/Text		TV/Radio /
	Pause/PTY Seek		Pause / Step / Freeze
	Random/PTY Seek Start		Play / Slow
	I<</Preset		I<< / Preset-
	>>I/Preset Up		>>I / Preset+
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol+
	Volume-		Vol-
	TV		Shift + 1
	DVD/CD		Shift + 3
	DVD/CD		Shift + 2
	AUX		Shift + 7
	Tuner		Shift + 6





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute / Dimmer
	Volume+		Vol+
	Volume-		Vol-
	TV		Shift + 1
	DVD/CD		Shift + 3
	DVD/CD		Shift + 2

Originalfernbedienung Ersatzfernbedienung

	AUX		Shift + 7
	Tuner		Shift + 6

