
 





**Originalfernbedienung    Ersatzfernbedienung**

	PowerTv		Power
	NET		Shift + Fav / Marker / PC
	[i+]		Info / Angle
	P.Info		Shift + Info / Angle
	ATV		Shift + 1
	DTV		Shift + 2
	SAT		Shift + 0
	Radio		TV/Radio /
	Power Source		Shift + Power
	<< Source		<< / Tune-
	Play Source		Play / Slow
	>> Source		>> / Tune+
	Control		Smart / List
	Rec Source		Rec / Rec Mode
	Rec Stop		Shift + Stop /
	Stop Source		Stop / Hold
	Ready Time Shift		Sound / Title

**Originalfernbedienung    Ersatzfernbedienung**

	← Time Shift		I<< / Preset-
	Pause Time Shift		Pause / Step / Freeze
	→ Time Shift		>>I / Preset+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Fav / Marker / PC
	0		0
	Source		AV / Input / RDS
	I/II/I+II(▼/O)		Audio / Lang I/II
	[<>]		Picture / Format



