




 
 


 
 
 






 

 
 


 

 





 


 

 
 
 
 
 
 
 
 


 

 

 

 


 


 






 
 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	DTV		Smart
	ATV		Media
	FAV List		Shift + Pre Ch
	CH List		List
	TV / Radio		TV/R
	Aspect		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	EPG		Guide
	FAV		Pre Ch
	Sound		Dual
	Stereo		Shift + Dual
	Picture		Shift + Format
	Vol +		Vol +
	Vol -		Vol -
	CH +		Ch +
	CH -		Ch -
	Mute		Mute
	Sleep		Sleep
	Input		AV
	Menu		Menu
	Up		Up
	Right		Right
	Down		Down



