




 
 

 
 

 











 





 
 
 
 





**Originalfernbedienung Ersatzfernbedienung**

	Standby / On		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4 / << Shuttle		4
	5		5
	6 / Shuttle >>		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	TV / VCR		TV/R
	DVD View		Smart
	VCR View		Media
	Audio		Dual


**Originalfernbedienung Ersatzfernbedienung**

	TRK +		Ch +
	TRK -		Ch -
	F.Adv / Step		Shift + Pause
	I<< / <<		<<
	I<< / <<		I<<
	>>I / >>		>>
	>>I / >>		>>I
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Menu		Menu
	Subtitle		Subt
	Info.		Info
	Return		Back
	Up		Up
	Right		Right
	Down		Down





**Originalfernbedienung Ersatzfernbedienung**

	Left		Left
	OK		Ok
	Rec		Rec
	Speed		Sleep
	EZ View		Guide
	Disc Menu		D. Menu
	Timer		AV
	Angle / IPC		Format
	Mark / Search		Pre Ch
	TV Standby / On		Shift + Power
	Mode / Repeat		Text
	TV Mute		Mute
	TV 1		Shift + 1
	TV 2		Shift + 2
	TV 3		Shift + 3
	TV 4		Shift + 4
	TV 5		Shift + 5

**Originalfernbedienung Ersatzfernbedienung**

	TV 6		Shift + 6
	TV 7		Shift + 7
	TV 8		Shift + 8
	TV 9		Shift + 9
	TV 0		Shift + 0
	TV Vol +		Vol +
	TV Vol -		Vol -
	TV Prog +		Shift + Ch +
	TV Prog -		Shift + Ch -

