 







 









 



















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Audio I/II		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH +		CH+ / Page+
	Index		Display / Media
	Vol +		Vol+
	CH -		CH- / Page-
	List		Smart / List
	Vol -		Vol-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red / <<		<< / Tune-
	Red / <<		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung






 Green / >>	 >> / Tune+
 Green / >>	 Green / APP / Repeat
 Yellow / I<<	 I<< / Preset-
 Yellow / I<<	 Yellow / YouTube / Repeat
 Blue / >>	 >> / Preset+
 Blue / >>	 Blue / Prime Video / Random
 Text / Play/Pause	 Text / Goto
 Text / Play/Pause	 Play / Slow
 Text / Play/Pause	 Pause / Step / Freeze
 Stop / Still	 Stop / Hold
 Radio	 TV/Radio /
 Size / Aspect	 Picture / Format
 Size / Aspect	 Zoom / Size
 [≡x]	 Eject / Surround
 Subtitle / [≡o]	 Subtitle / EQ
 DMP	 D.Menu / Top
 Rec	 Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	O)/I-II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List		Smart / List
	Vol-		Vol-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-



