
 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|---------------|
|  | Power |  | Power |
|  | SAT |  | AV |
|  | Mute |  | Mute |
|  | PGUP |  | Shift + Ch + |
|  | PGDN |  | Shift + Ch - |
|  | FAV + |  | Shift + Right |
|  | FAV - |  | Shift + Left |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------|
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | SUB |  | Subt |
|  | Audio |  | Dual |
|  | TV / R |  | TV/R |
|  | Sleep |  | Sleep |
|  | TXT |  | Text |
|  | RCL |  | Back |
|  | Menu |  | Menu |
|  | Info |  | Info |
|  | VL + |  | Vol + |
|  | VL - |  | Vol - |
|  | Up |  | Up |
|  | Right |  | Right |
|  | Down |  | Down |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------------|
|  | Left |  | Left |
|  | OK |  | Ok |
|  | CH + |  | Ch + |
|  | CH - |  | Ch - |
|  | EPG |  | Guide |
|  | FAV |  | Pre Ch |
|  | << |  | << |
|  | >> |  | >> |
|  | Pause |  | Pause |
|  | I<< |  | I<< |
|  | >>I |  | >>I |
|  | Rec |  | Rec |
|  | Play / Pause |  | Play |
|  | Stop |  | Stop |
|  | USB |  | Media |
|  | MP3 |  | Smart |
|  | JPEG |  | Shift + Media |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------------|
|  | PVR List |  | List |
|  | Still >I< |  | Shift + Stop |
|  | Zoom |  | Eject |
|  | Edit |  | Options |
|  | Exit |  | Exit |
|  | A-B |  | Shift + Text |
|  | T.S. |  | 3D |
|  | GOTO |  | D. Menu |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

