


 














 





 



 

 



 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Contrast		Options
	Audio		Shift + Dual
	O<->O		TV/R
	Input		AV
	I+		Info
	Timer		Shift + AV
	I / II		Dual
	Red / Text		Red
	Green / Subtitle		Green
	Green / Subtitle		Subt
	Yellow / PIP Swap / A/B		Yellow
	Blue		Blue
	Picture		Menu
	Recall		Pre Ch
	Up / P +		Up
	Up / P +		Ch +

Originalfernbedienung Ersatzfernbedienung

	Down / P -		Down
	Down / P -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Mute		Mute
	Aspect		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	Text		Text
	PIP		D. Menu
	Freeze		Stop
	Cancel		Back
	List		List
	Text Cancel		Exit
	Text Hold		Pause
	Text Index		Guide
	Text Size		3D
	Text Reveal		Shift + Options
	Mix		Shift + Text

Originalfernbedienung Ersatzfernbedienung