


 











 





 

 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -
	Nicam		Smart

Originalfernbedienung Ersatzfernbedienung

	Auto		Media
	Display		Shift + Info
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	LCD Menu		Menu
	DVB Menu		D. Menu
	Input		AV
	P.Mode		Format
	S.Mode		Shift + Options
	Sleep		Sleep
	Info		Info
	FAV		Pre Ch





Originalfernbedienung Ersatzfernbedienung

FAV+	FAV+	SHIFT + + CH	Shift + Ch +
FAV-	FAV-	SHIFT + - CH	Shift + Ch -
TEXT	Text	REPEAT TEXT	Text
HOLD	Hold	■	Stop
LANG	Lang	SOUND DUAL	Dual
EPG	EPG	- / - GUIDE	Guide
INDEX	Index	SETTINGS OPT	Options
SIZE	Size	ZOOM ▲	Eject
REVEAL	Reveal	ECO 3D	3D
SUBPAGE	Subpage	SHIFT + AD SUBT	Shift + Subt
TV/RADIO	Red / Tv/Radio	A	Red
TV/RADIO	Red / Tv/Radio	SEARCH TV/R	TV/R
AUDIO	Green / Audio	B	Green
AUDIO	Green / Audio	SHIFT + SOUND DUAL	Shift + Dual
FREEZE	Yellow / Freeze	C	Yellow
FREEZE	Yellow / Freeze		Pause
SUBTITLE	Blue / Subtitle	D	Blue

Originalfernbedienung Ersatzfernbedienung

SUBTITLE	Blue / Subtitle	AD SUBT	Subt

