



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Direct Tv Rec	+	Shift + Rec / Rec Mode
	Tv Aspect/AV Link		Picture / Format
	Tv/Text		Text / Goto
	1		1
	2		2
	3		3
	Tracking/V-Lock+		CH+ / Page+
	4		4
	5		5
	6		6
	Tracking/V-Lock-		CH- / Page-
	7		7
	8		8
	9		9
	Vol+		Vol+
	AV/Input Select		AV / Input / RDS

**Originalfernbedienung    Ersatzfernbedienung**

	0		0
	-/--		Guide / EPG / -/--
	Vol-		Vol-
	Library/Search		Red / Netflix / Search
	I<< Index		I<< / Preset-
	Index >>I		>>I / Preset+
	ShowView		Info / Angle
	Still Album		Smart / List
	Replay		Back / Return
	Pause/Step		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Menu		Menu / Home
	Up		Up
	Play		Play / Slow
	Exit		Exit / Cancel / Clear
	Left		Left
	<<		<< / Tune-







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Tv Aspect/AV Link		Picture / Format
	Tv/Text		Text / Goto
	1		1
	2		2
	3		3
	Tracking/V.Lock+		CH+ / Page+
	4		4
	5		5
	6		6
	Tracking/V.Lock-		CH- / Page-
	7		7
	8		8
	9		9
	Vol+		Vol+
	AV/Input Select		AV / Input / RDS
	0		0

**Originalfernbedienung Ersatzfernbedienung**

	-/--		Guide / EPG / -/--
	Vol-		Vol-
	Prog./Check Up		Up
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Date+		Right
	Yellow		Yellow / YouTube / Repeat
	On+		Shift + Vol+
	Blue		Blue / Prime Video / Random
	Off+		Shift + CH+ /
	Prog./Check Down		Down
	Date-		Left
	On-		Shift + Vol-
	Off-		Shift + CH- /

