

 

 
 

 



 



 


 

 
 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Shift + Guide
	SUBTL		Subt
	EPG		Guide
	Menu		Menu
	Vol +		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol -		Vol -
	CH +		Ch +
	CH -		Ch -
	Exit		Exit
	Red / USB Left		Red
	Red / USB Left		Shift + Left
	Green / USB		Green
	Green / USB		Shift + Down
	Yellow / USB Up		Yellow
	Yellow / USB Up		Shift + Up
	Blue / USB Right		Blue
	Blue / USB Right		Shift + Right
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down





Originalfernbedienung Ersatzfernbedienung

PREV QV	QV	SETTINGS OPT	Options
NEXT FAV	FAV	FAV PRE-CH	Pre Ch
SOURCE ↺	Source	TIMER AV	AV
SLEEP ⏸	Sleep	PROG SLEEP	Sleep
PICTURE ▶◀	Picture	SHIFT + PICTURE FORMAT	Shift + Format
SOUND [-] [s]	Sound	SHIFT + SOUND DUAL	Shift + Dual
DISPLAY [i]	Display	DISPLAY INFO	Info
TOP I/II	I/II / Top	SOUND DUAL	Dual
REV FAV-	FAV - / REV	◀◀	<<
FWD FAV+	FAV + / FWD	▶▶	>>
TEXT USR/CR	USR/CR / Text	APP MEDIA	Media
TEXT USR/CR	USR/CR / Text	REPEAT TEXT	Text
INDEX ▶	Play/Pause / Index	PLAY MODE ▶	Play
INDEX ▶	Play/Pause / Index	SHIFT + DISPLAY INFO	Shift + Info
INDEX ▶	Play/Pause / Index	⏸	Pause
CANCEL □	Stop / Cancel	□	Stop
CANCEL □	Stop / Cancel	SHIFT + CLEAR EXIT	Shift + Exit




 
 

 
 
 
 



 



Originalfernbedienung Ersatzfernbedienung

SIZE [i]	Size	PICTURE FORMAT	Format
PROG MIX	Prog / Mix	HOME SMART	Smart
PROG MIX	Prog / Mix	SHIFT + PROG SLEEP	Shift + Sleep
RETURN SUBPG	Return / SUBPG	RETURN BACK	Back
REPEAT REVEAL	Repeat / Reveal	SHIFT + RETURN BACK	Shift + Back
SEARCH HOLD	Search / Hold	SEARCH TV/R	TV/R

 

 

 


 
 
 

 









Originalfernbedienung Ersatzfernbedienung

		Power
		AV
		Exit
		Menu
		Dual
		Media
		Options
		Text
		TV/R
		1
		2
		3
		6
		5
		4
		7
		8

Originalfernbedienung Ersatzfernbedienung

		9
		0
		Guide
		Up
		Right
		Ok
		Left
		Down
		Subt
		Pause
		Rec
		<<
		Play
		>>
		Shift + Media
		Shift + Dual
		Shift + 6

