 




 
 
 


 
 



 





 






 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

 




 
 
 


 
 



 





 






 
 
 
 
 

Originalfernbedienung Ersatzfernbedienung

	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Timer		AV
	Pg Dn		Shift + Ch -
	Pg Up		Shift + Ch +
	<<		<<
	>>		>>
	I<<		I<<





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9




 
 

 
 







 

Originalfernbedienung Ersatzfernbedienung

	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Timer		AV
	Pg Dn		Shift + Ch -
	Pg Up		Shift + Ch +
	<<		<<
	>>		>>
	I<<		I<<


 
 
 








 


 





Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute
FAV		Pre Ch
Subtitle		Subt
Info		Info
TTX		Text
List		List
Recall		Back
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9

Originalfernbedienung Ersatzfernbedienung

0		0
Menu		Menu
Exit		Exit
EPG		Guide
Swap		Media
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
Vol+		Vol +
Vol-		Vol -
Pg Up		Shift + Up
PG Dn		Shift + Down
CH+		Ch +
CH-		Ch -
>>		>>



