 

 

 


 
 




 


 
 
 
 
 

 

 




 

 
 
 
 
 
 




 

 

 
 

 

 


 
 

 

 
 


 


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	Stop		Stop
	Pause		Pause
	Play		Play
	I<< Skip		I<<
	>>I Skip		>>I
	<< Search / Slow		<<
	>> Search / Slow		>>
	Menu		Menu
	Up		Up
	Left		Left
	Select		Ok
	Right		Right
	Down		Down
	Title		Smart
	Display		Info

Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Subtitle		Subt
	Audio		Dual
	Angle		Format
	Marker		Pre Ch
	1		1
	Play Mode		Shift + Play
	Repeat Mode		Shift + Text
	Cancel		Exit
	A-B Repeat		Text
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



