

 
 
 





 
 
 
 
 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Sleep		Sleep
	P.Mode	 + 	Shift + Format
	S.Mode		Dual
	Rec		Rec
	DTV		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	List / Goto		List
	Menu		Menu
	Source		AV
	Aspect		Format
	Recall		Back
	Info		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	CH -		Ch -
	CH +		Ch +
	Vol -		Vol -
	Vol +		Vol +
	Audio	 + 	Shift + Dual
	FAV / Title		Pre Ch




Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	EPG / Display		Guide
	EPG / Display		Shift + Info
	Index / I<<		I<<
	Hold / >>I		>>I
	Cancel / <<		<<
	Size / >>		>>
	TTX / A-B		Text
	Mix / Play/Pause		Eject
	Mix / Play/Pause		Play
	Mix / Play/Pause		Pause
	Subpage / Stop		Stop
	Subpage / Stop		Shift + Subt
	Subtitle		Subt
	Reveal / Eject		Shift + Exit
	Freeze / Repeat		Shift + Pause
	TV/Radio / Setup		Options

Originalfernbedienung Ersatzfernbedienung

	Freeze / Repeat		Shift + Text
	TV/Radio / Setup		TV/R
	Rec Menu /		Shift + Menu
	Rec Menu /		D. Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

