



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Recall / S.Page		Back
	Index / PVR List		Smart
	Reveal / Rec		Rec
	Zoom / T.Shift		Eject
	Hold / Guide		Guide
	Hold / Guide		Shift + Stop
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol +		Vol +
	Vol -		Vol -
	I - II		Dual
	Source		AV
	Freeze		Shift + Pause
	CH +		Ch +
	CH -		Ch -
	Sleep		Sleep
	Menu		Menu
	DTV / Radio		TV/R
	Exit		Exit





Originalfernbedienung Ersatzfernbedienung

	Aspect		Format
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Media		Media
	Info		Info
	Subtitle		Subt
	Play / Pause		Play
	Play / Pause		Pause
	I<<		I<<
	>>I		>>I
	Stop		Stop
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	>>		>>
	Slow / FAV		Pre Ch
	Repeat / Fav +		Shift + Up
	Repeat / Fav +		Shift + Text
	A-B / Fav -		Shift + Down
	A-B / Fav -		Shift + Back

