


 
 





 
 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	D/A Tv		Smart
	Input		AV
	Guide		Guide
	Radio		TV/R
	Subtitle/*		Subt
	PIP PR-		Shift + Ch +
	PIP PR+		Shift + Ch -
	Swap		Media
	PIP Input		Shift + AV
	PIP		Shift + 3D
	Info		Info
	Back		Back
	ARC		3D
	Menu		Menu
	Text		Text
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	FAV		Pre Ch
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2


 

 




 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Up		Up
	OK		Ok
	Down		Down
	Right		Right
	Left		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Play		Play
	Pause		Pause
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	<<		<<
	>>		>>

