

 
 

 









 





 
















Originalfernbedienung Ersatzfernbedienung




 


 

 

 
 
 
 
 

 


 
 

 

 

 
 
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Vol +		Vol +
	Vol -		Vol -
	Nicam		Smart

Originalfernbedienung Ersatzfernbedienung

	Display		Info
	CH +		Ch +
	CH -		Ch -
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	LCD Menu		Menu
	Exit		Exit
	Input		AV
	PMode		Shift + Format
	SMode		Shift + Dual
	Sleep		Sleep
	Fav		Pre Ch
	Fav -		Shift + Down
	Fav +		Shift + Up




Originalfernbedienung Ersatzfernbedienung

	Aspect		Format
	Play/Pause / Text		Play
	Play/Pause / Text		Pause
	Play/Pause / Text		Text
	Stop / Hold		Stop
	Lang		Dual
	Subtitle		Subt
	>> / Index		>>
	<< / Size		<<
	>> / Reveal		>>
	<< / Subpage		<<
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

