



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	DVD		Shift + 2
	VCR		Shift + 4
	Title / PBC		Sound / Title
	Menu		Menu / Home
	Display		Display / Media
	Open / Close		Eject / Surround
	Up / PR +		CH+ / Page+
	Up / PR +		Up
	Output		AV / Input / RDS
	Left		Left
	Setup / Enter		OK
	Setup / Enter		Setup / OPT /
	Right		Right
	Return / OK		Back / Return
	Down / PR -		CH- / Page-
	Down / PR -		Down

**Originalfernbedienung    Ersatzfernbedienung**

	Clear / 3D		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat
	Zoom		Zoom / Size
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	I<< Prev		I<< / Preset-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Next >>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Program		TV/Radio /
	CLK / CNT		Text / Goto
	Mark		Fav / Marker / PC
	Search		Red / Netflix / Search
	Rec		Rec / Rec Mode





Originalfernbedienung Ersatzfernbedienung

	Speed / Angle		Info / Angle
	TV / VCR		Smart / List
	1 / Tracking -		1
	1 / Tracking -		Vol-
	2		2
	3 / Tracking +		3
	3 / Tracking +		Vol+
	4		4
	5		5
	6		6
	System		D.Menu / Top
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung


