
 








Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	TV		Shift + 1
	VCR / AUX		Shift + 7
	VCR / AUX		Shift + 4
	SLEEP		Sleep / Timer
	TV / AV		AV / Input / RDS
	TUNER / BAND		Shift + 6
	DVD / CD		Shift + 3
	DVD / CD		Shift + 2
	1		1
	2		2
	3		3
	CH +		CH+ / Page+
	4		4
	5		5
	6		6
	CH -		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	VOL +		Vol+
	Cancel		Exit / Cancel / Clear
	0		0
	≥10 / -/-		Guide / EPG / -/-
	VOL -		Vol-
	SKIP PREV.		I<< / Preset-
	SKIP NEXT		>>I / Preset+
	SLOW/SEARCH		<< / Tune-
	SLOW/SEARCH		>> / Tune+
	STOP		Stop / Hold
	PAUSE		Pause / Step / Freeze
	PLAY		Play / Slow
	TOP MENU / DIR. NAV.		D.Menu / Top
	UP		Up





Originalfernbedienung Ersatzfernbedienung

	MENU / PLAY LIST		Menu / Home
	LEFT		Left
	ENTER		OK
	RIGHT		Right
	DISPLAY / TV VOL-		Display / Media
	DISPLAY / TV VOL-		Shift + Vol-
	DOWN		Down
	RETURN / TV		Back / Return
	RETURN / TV		Shift + Vol+
	SUBWOOFER		Shift + Subtitle / EQ
	SFC		Blue / Prime Video / Random
	C. FOCUS		TV/Radio /
	SUPER SRND.		Eject / Surround
	DOLBY PL. II		Sound / Title
	Mix 2CH		Picture / Format
	C. S. M.		Red / Netflix / Search
	POSITION		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	AUDIO		Audio / Lang I/II
	ZOOM		Zoom / Size
	SETUP		Setup / OPT /
	MUTING		Mute / Dimmer
	FL DISPLAY		Shift + Display / Media
	PAGE		Shift + CH+ /
	GROUP		Shift + CH- /
	REPEAT		Green / APP / Repeat
	PLAY MODE		Info / Angle
	TEST		Text / Goto
	CH. SELECT		Smart / List
	QUICK REPLAY		Shift + OK
	SUBTITLE		Subtitle / EQ





MEMORY



Originalfernbedienung **Ersatzfernbedienung**

	Power		Power
	Power AV	 + 	Shift + Power
	Tv/AV		AV / Input / RDS
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7
	8		8
	9		9
	0		0
	≥10 / -/-		Guide / EPG / -/-
	Tv Vol-		Vol-

Originalfernbedienung **Ersatzfernbedienung**

	Tv Vol+		Vol+
---	---------	---	------



 







Originalfernbedienung Ersatzfernbedienung

	Power		Shift + Power
	Power AV		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥ 10 / -/--		Guide / EPG / -/--
	I<<		I<< / Preset-
	I>>		I>> / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow

