 

 






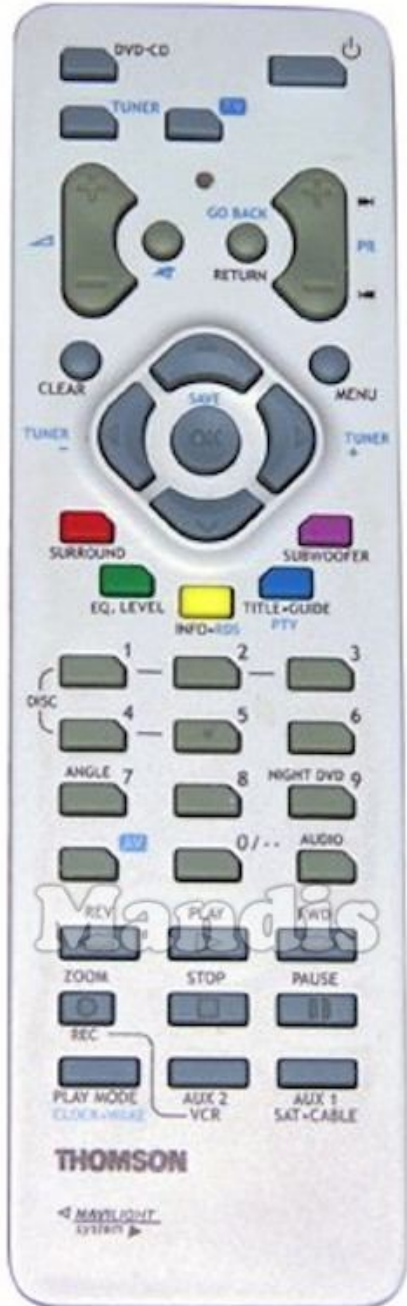

**Originalfernbedienung Ersatzfernbedienung**

|   |               |   |              |
|---|---------------|---|--------------|
|    | Power         |    | Power        |
|    | Mute          |    | Mute         |
|    | Menu          |    | Menu         |
|    | 1 / Disc 1    |    | 1            |
|    | 2 / Disc 2    |    | 2            |
|    | 3 / Disc 3    |    | 3            |
|    | 4 / Disc 4    |    | 4            |
|    | 5 / Disc 5    |    | 5            |
|    | 6             |    | 6            |
|    | 7 / Angle     |    | 7            |
|  | 8             |  | 8            |
|  | 9 / Night DVD |  | 9            |
|  | 0 / --        |  | 0            |
|  | Aux 1 / SAT / |  | AV           |
|  | Aux 2 / VCR   |  | Shift + AV   |
|  | Tuner         |  | Shift + TV/R |
|  | TV            |  | TV/R         |

**Originalfernbedienung Ersatzfernbedienung**

|   |               |   |              |
|---|---------------|---|--------------|
|    | DVD / CD      |    | Media        |
|    | Vol +         |    | Vol +        |
|    | Vol -         |    | Vol -        |
|    | >>            |    | >>           |
|    | <<            |    | <<           |
|    | Up            |    | Up           |
|    | Right         |    | Right        |
|    | Down          |    | Down         |
|    | Left          |    | Left         |
|    | OK / Save     |    | Ok           |
|  | Return        |  | Back         |
|  | Clear / Sleep |  | Sleep        |
|  | Play Mode     |  | Shift + Play |
|  | Pause         |  | Pause        |
|  | Stop          |  | Stop         |
|  | Rec / Zoom    |  | Rec          |
|  | << REV        |  | <<           |




**Originalfernbedienung Ersatzfernbedienung**

|   |                    |   |                  |
|---|--------------------|---|------------------|
|    | Play               |    | Play             |
|    | >> FWD             |    | >>               |
|    | Audio              |    | Dual             |
|    | PR +               |    | Ch +             |
|    | PR -               |    | Ch -             |
|    | Tuner -            |    | Shift +<br>Left  |
|    | Tuner +            |    | Shift +<br>Right |
|    | Purple /           |    | Pre Ch           |
|    | Red / Surround     |    | Red              |
|   | Green / EQ Level   |   | Green            |
|  | Yellow / Info      |  | Yellow           |
|  | Blue / Title/Guide |  | Blue             |
|  | Yellow / Info      |  | Info             |
|  | Blue / Title/Guide |  | Guide            |
|   |                    |   |                  |
|   |                    |   |                  |
|   |                    |   |                  |

**Originalfernbedienung Ersatzfernbedienung**

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

