
 




 
 



 

 






 




 

 






 




Originalfernbedienung Ersatzfernbedienung

 
 

 






 
 
 








 
 
 

 

 
 
 
	Power		Power
	Mute		Mute
	(?)		3D
	*		D. Menu
	Input		AV
	♥		Shift + Pre Ch
	( ↑ )		Format
	(i)		Info
	Recall		Pre Ch
	Zoom+		Ch +
	Zoom-		Ch -
	(:)		Text
	Vol+		Vol +
	Vol-		Vol -
	(::)		Guide
	Windows		Media
	World		Options

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Home		Smart
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Stop		Stop
	Play		Play
	Pause		Pause
	Search		TV/R
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Red		Red





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Audio		Dual				
	Subt.		Subt				

