
 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------------------------|
|  | Power |  | Power |
|  | Picture |  | Picture / Format |
|  | Input Tv |  | Shift + AV / Input / RDS |
|  | Input AV |  | AV / Input / RDS |
|  | Menu |  | Menu / Home |
|  | Text |  | Text / Goto |
|  | STTL |  | Subtitle / EQ |
|  | APPS |  | Fav / Marker / PC |
|  | i |  | Info / Angle |
|  | Exit |  | Exit / Cancel / Clear |
|  | Home |  | Shift + Menu / |
|  | Netflix |  | Shift + Red / Netflix / |
|  | Left |  | Left |
|  | Up |  | Up |
|  | Right |  | Right |
|  | Guide |  | Guide / EPG / -/-- |
|  | OK |  | OK |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-----------------------------|
|  | Option |  | Setup / OPT / |
|  | Down |  | Down |
|  | Back/Return |  | Back / Return |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | CH- |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--------------------------|-----------|---|-----------------------|
| 6 _{mno} | 6 | 6 TUNER | 6 |
| 7 _{pqrs} | 7 | 7 AUX - HDD | 7 |
| 8 _{tuv} | 8 | 8 USB | 8 |
| 9 _{wxyz} | 9 | 9 BLUETOOTH | 9 |
| ? eHELP | ?/Help | SHIFT + ANGLE INFO | Shift + Info / Angle |
| 0 | 0 | 0 HDMI - BAT | 0 |
| ↻ LAST VIEW | Last View | SHIFT + RETURN BACK | Shift + Back / Return |
| ⏪ | << | TUNE- | << / Tune- |
| ▶ | Play | SLOW | Play / Slow |
| ⏩ | >> | TUNE+ | >> / Tune+ |
| ⏮ | I<< | PRESET- | I<< / Preset- |
| ⏸ | Pause | STEP - FREEZE | Pause / Step / Freeze |
| ⏭ | >>I | PRESET+ | >>I / Preset+ |
| MY APP | My APP | LIST SMART | Smart / List |
| ■ | Stop | HOLD | Stop / Hold |
| ● | Rec | REC MODE | Rec / Rec Mode |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

