





















Originalfernbedienung Ersatzfernbedienung

	On		Power
	Standby		Shift + Power
	V1		1
	V2		4
	V3		7
	Multi CH		8
	DVD		2
	Tape		5
	Tuner		6
	CD		3
	Tuner/Dimmer		0
	Tuner/Dimmer		Shift + Mute / Dimmer
	Sleep		Sleep / Timer
	CH/Disc+		CH+ / Page+
	Vol+		Vol+
	CH/Disc-		CH- / Page-
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	SP A/B		Sound / Title
	Up		Up
	Muting		Mute / Dimmer
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stereo		Red / Netflix / Search







**Originalfernbedienung Ersatzfernbedienung**

	On		Power
	Standby		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	CLR		Exit / Cancel / Clear
	CH/Disc+		CH+ / Page+
	CH/Disc-		CH- / Page-
	Top Menu		D.Menu / Top

**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Muting/Previous Menu		Menu / Home
	Muting/Previous Menu		Mute / Dimmer
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	I>>		I>> / Preset+
	Audio		Audio / Lang I/II







Originalfernbedienung Ersatzfernbedienung

	On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH/Disc+		CH+ / Page+
	CH/Disc-		CH- / Page-
	Guide		Guide / EPG / -/-
	Up		Up
	Muting/Previous Menu		Menu / Home
	Muting/Previous Menu		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Setup		Setup / OPT /
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	On CD		Shift + Power
	Standby CD		Shift + Mute / Dimmer
	1 CD		Shift + 1
	2 CD		Shift + 2
	3 CD		Shift + 3
	4 CD		Shift + 4
	5 CD		Shift + 5





