

 
 
 


 
 









 

 

 

 

 
 







 
 

 

 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	PREMIUM NET		Smart
	Guida		Guide
	Menu		Menu
	Info		Info
	Vol +		Vol +
	Vol -		Vol -
	P +		Ch +
	P -		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	Back		Back
	Exit / Stop		Exit
	Exit / Stop		Stop
	<< REW		<<
	>> FWD		>>
	Pause / Play		Play
	Pause / Play		Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



**Originalfernbedienung Ersatzfernbedienung**

	0		0
	Lista		List
	Opzioni		Options
	Text		Text
	TV / Rad		TV/R
	APP	+	Shift + Media
	Source		AV
	I<< Prev		I<<
	Rec		Rec
	File		Media
	>>I Next		>>I

Originalfernbedienung Ersatzfernbedienung

