 
 





 
 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Fav		Pre Ch
	List		List
	Audio		Dual
	Back		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	i		Info
	EPG		Guide
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Exit		Exit
	V +		Vol +
	V -		Vol -
	CH +		Ch +
	CH -		Ch -
	P +		Shift + Ch +
	P -		Shift + Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	0		0				
	TV / R		TV/R				
	Home		Smart				
	Pause		Pause				
	Stop		Stop				
	<<		<<				
	>>		>>				
	Rec		Rec				
	Play		Play				
	I<<		I<<				
	>>I		>>I				
	OPT		Options				
	Text		Text				
	SUB		Subt				
	Message		3D				

