
 



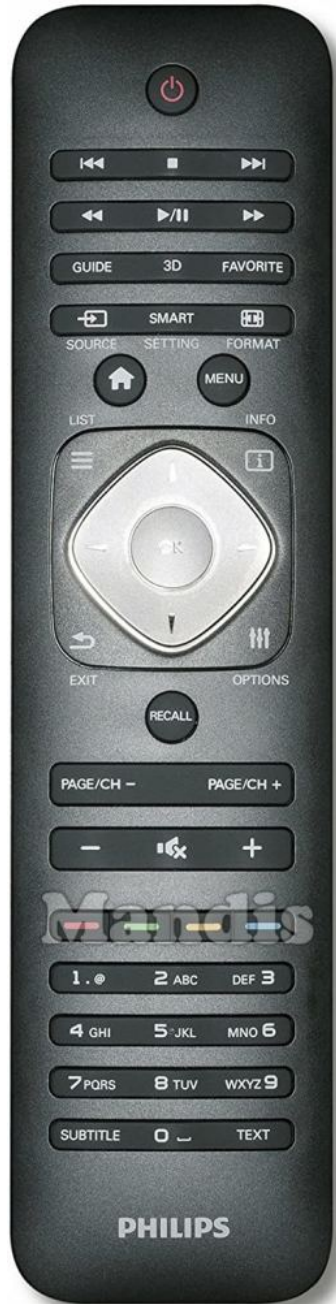 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	I<<		I<<
	Stop		Stop
	>>I		>>I
	<<		<<
	Play / Pause		Play
	Play / Pause		Pause
	>>		>>
	Guide		Guide
	Source		AV
	Format		Format
	Menu		Menu
	Info		Info
	Up		Up
	Left		Left
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Exit		Exit
	Options		Options
	Page/CH -		Ch -
	Page/CH +		Ch +
	Vol -		Vol -
	Vol +		Vol +
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	7		7				
	8		8				
	9		9				
	0		0				

