 

 



 
 


 

 
 
 


 
 









 




 
 
 

 



 
 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--/10+	 + 	Shift + Guide
	Recall		Back
	Subtitle		Subt
	P.Mode	 + 	Shift + Format
	S.Mode		Dual

Originalfernbedienung Ersatzfernbedienung

	MTS		Media
	Sleep		Sleep
	Source		AV
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Freeze		Red
	CH.List		List
	Auto		Yellow
	Aspect		Format
	Up		Up
	Down		Down
	OK		Ok
	Right		Right
	Left		Left

 

 
 




Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Exit		Exit
	CC		Smart
	Eject / V-Chip		Eject
	Play/Pause / FAV		Play
	Play/Pause / FAV		Pre Ch
	Stop/ADD/Erase		Stop
	Title		Options
	Setup/EPG		Guide
	Audio		Shift + Dual
	Goto		TV/R
	A-B		Shift + Text
	Menu (lower)		D. Menu
	Slow		Pause
	Repeat		Text
	I<<		I<<
	>>I		>>I

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>

