 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Software	 + 	Shift + Media
	Play List		List
	USB		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / Radio		TV/R
	←PR		Back

Originalfernbedienung Ersatzfernbedienung





	TV / AV		AV
	Zoom		Eject
	Sleep		Sleep
	Red / Find		Red
	Green / V-Format		Green
	Green / V-Format		Format
	Yellow / TXT		Yellow
	Yellow / TXT		Text
	Blue / Audio L/R		Blue
	Blue / Audio L/R		Dual
	Menu		Menu
	Exit		Exit
	Up / PR +		Up
	Up / PR +		Ch +
	Down / PR -		Down
	Down / PR -		Ch -
	Down / PR -		Ch -
	Down / PR -		Ch -
	Down / PR -		Ch -
	Right / Vol +		Right




**Originalfernbedienung Ersatzfernbedienung**

	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK / List		Ok
	EPG		Guide
	Info		Info
	SAT		Smart
	FAV		Pre Ch
	Page +		Shift + Ch +
	Page -		Shift + Ch -
	Play		Play
	Stop		Stop
	Rec		Rec
	<< Fast		<<
	Fast >>		>>
	Shift		Subt
	< Slow		I<<

**Originalfernbedienung Ersatzfernbedienung**

	Slow >		>>I
	Pause		Pause

