 



 

 





 





 





 



 

 





 







 
 
 

 



 

 

 

 







 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Red / Media		Red / Netflix / Search
	Red / Media		Display / Media
	Green / TV		Green / APP / Repeat
	Green / TV		TV/Radio /
	Yellow / Web		Yellow / YouTube / Repeat
	Blue / APP		Blue / Prime Video / Random
	Blue / APP		Smart / List
	Vol-		Vol-
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Vol+		Vol+
	Home		D.Menu / Top
	Up / CH+		CH+ / Page+
	Up / CH+		Up
	Return		Back / Return

**Originalfernbedienung Ersatzfernbedienung**

	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down / CH-		CH- / Page-
	Down / CH-		Down
	Mouse		Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	1/A/a		Guide / EPG / -/-





 



 

 




 





 



 

 


 

 

 

Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	0		0				
	<x]		Fav / Marker / PC				





 







 

 

 



 

 



 







 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red / Media		Red / Netflix / Search
	Red / Media		Display / Media
	Green / TV		Green / APP / Repeat
	Green / TV		TV/Radio /
	Yellow / Web		Yellow / YouTube / Repeat
	Blue / APP		Blue / Prime Video / Random
	Blue / APP		Smart / List
	Vol-		Vol-
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Vol+		Vol+
	Home		D.Menu / Top
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Return		Back / Return

 



Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Mouse		Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	1/A/a		Guide / EPG / -/-





Originalfernbedienung   Ersatzfernbedienung

	0		0
	<x]		Fav / Marker / PC

Originalfernbedienung   Ersatzfernbedienung