



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	A1	TV 1	1	- VOLL	Volume-	VOL -	Vol-
	A2	DVD 2	2	LUME +	Volume+	+ VOL	Vol+
	Off		Power				
	I<< CD		I<< / Preset-				
	>>I CD		>>I / Preset+				
	Play CD		Play / Slow				
	Pause CD		Pause / Step / Freeze				
	Stop/Clear CD		Stop / Hold				
	CD Play Mode	CD - STB	3				
	Band		Sound / Title				
	Preset Tune Down		Down				
	Preset Tune Up		Up				
	Tune-		<< / Tune-				
	Tune+		>> / Tune+				
	XBS		Display / Media				
	S.Virtualizer		Smart / List				
	Sleep		Sleep / Timer				

