



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Pic Size		Format
	Pic Mode		Shift + Format
	Sleep		Sleep
	Dual I-II		Dual
	S.Mode		Shift + Dual
	Still		Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	-/--		Guide
	PRE-CH		Pre Ch
	S.Swap		I<<
	PIP		Options
	P.Input		>>
	P.Position		>>I
	P.Size		Subt
	P.Swap		<<
	TV		TV/R
	PC/HDMI		Media
	AV/Sel		Smart
	Source		AV
	Menu		Menu
	Exit		Exit
	TTX/On		Text
	Mix		Shift + Text





**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	PR+		Ch +
	Down		Down
	PR-		Ch -
	Right		Right
	Vol+		Vol +
	Left		Left
	Vol-		Vol -
	Enter		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Store		Shift + Smart
	Flof/List		List
	Hold		Stop
	Cancel		Back

**Originalfernbedienung Ersatzfernbedienung**

	Index		Info
	Time		Shift + AV
	Size		Eject
	Reveal		D. Menu

