



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		Shift + 1
	Tuner/Band		Shift + 6
	FM Mode		TV/Radio /
	DVD/CD		Shift + 3
	DVD/CD		Shift + 2
	I<</Skip Down		I<< / Preset-
	Power VCR		Shift + Power
	>>I / Skip Up		>>I / Preset+
	TV / AV		AV / Input / RDS
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Top Menu		D.Menu / Top
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Left		Left
	Enter / Set		OK
	Right		Right
	OSD		Smart / List
	Down		Down
	Return		Back / Return
	Angle		Info / Angle
	RDS		Shift + AV / Input / RDS
	Timer		Sleep / Timer
	Setup		Setup / OPT /
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Play Mode		Picture / Format
	1		1
	2		2
	3		3



