



Originalfernbedienung Ersatzfernbedienung

	System Standby		Power
	Muting		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<</CH Preset-Tuner		I<< / Preset-
	>>/CH Preset+ Tuner		>> / Preset+
	Sound Field Mode		Sound / Title
	Sound Field		Audio / Lang I/II
	Sleep		Sleep / Timer
	Tv/Video/ANT		TV/Radio /
	DVD Menu		D.Menu / Top
	Standby AV		AV / Input / RDS
	Main Menu		Menu / Home
	Up		Up



 



 



 

 



 

 

 



 

 



 

 

Originalfernbedienung Ersatzfernbedienung

	4 Tuner		Left
	5 Tuner		OK
	6 Tuner		Right
	8 Tuner		Down
	9 Tuner		Back / Return
	Master Vol+		Vol+
	Multi CH		Smart / List
	Tv CH+		CH+ / Page+
	Master Vol-		Vol-
	Tv CH-		CH- / Page-
	1 Tuner		1
	2 Tuner		2
	CD		3
	4 Tuner		4
	5 Tuner		5
	Tuner		6
	7 Tuner		7







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Video 1		Shift + 1
	Video 2		Shift + 2
	DVD/LD		TV/Radio /
	MD/Tape		Shift + 5
	CD		Shift + 3
	Tuner		Shift + 6
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	>10/Shift/-/-		Shift + 0






Originalfernbedienung Ersatzfernbedienung

	0		0
	Enter/D.Tuning/Return		OK
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	D.Skip/TV/VTR		D.Menu / Top
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Muting		Mute / Dimmer
	Master Vol+		Vol+
	Master Vol-		Vol-

 

 


 

 

 








Originalfernbedienung Ersatzfernbedienung

	Standby CD		Power
	Standby Video		Shift + Power
	Video 1		Shift + Smart / List
	Video 2		Shift + Display / Media
	DVD/LD		Shift + 2
	MD/Tape		Shift + D.Menu / Top Menu
	CD		TV/Radio /
	Tuner		Text / Goto
	1 CD		Shift + 1
	1 Video 1		1
	2 CD		Smart / List
	2 Video 1		2
	3 CD		Shift + 3
	3 Video 1		3
	4 CD		4
	4 Video 1		Shift + 4
	5 CD		5

Originalfernbedienung Ersatzfernbedienung

	5 Video 1		Shift + 5
	6 CD		Shift + 6
	6 Video 1		6
	7 CD		7
	7 Video 1		Shift + 7
	8 CD		Shift + 8
	8 Video 1		8
	9 CD		Shift + 9
	9 Video 1		9
	>10/Shift/-/- CD		Fav / Marker / PC
	>10/Shift/-/- Video 1		Shift + 0
	0 CD		Guide / EPG / -/-
	0 Video 1		0
	Enter/D.Tuning/Return CD		Display / Media
	Enter/D.Tuning/Return Video 1		OK
	I<< CD		I<< / Preset-
	I<< Video 1		Shift + I<< / Preset-

 

 

 

 
 

 



 

 

 






 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Standby Video		Shift + Power
	Video 1		Shift + 1
	Video 2		Shift + 2
	DVD/LD		Display / Media
	MD/Tape		Smart / List
	CD		Setup / OPT /
	Tuner		TV/Radio /
	1 MD/Tape		Shift + Smart / List
	1 Video 2		1
	2 MD/Tape		Shift + Display / Media
	2 Video 2		2
	3 MD/Tape		Shift + 3
	3 Video 2		3
	4 MD/Tape		4
	4 Video 2		Shift + 4
	5 MD/Tape		Shift + 5

Originalfernbedienung Ersatzfernbedienung

	5 Video 2		5
	6 MD/Tape		6
	6 Video 2		Shift + 6
	7 MD/Tape		7
	7 Video 2		Shift + 7
	8 MD/Tape		Shift + 8
	8 Video 2		8
	9 MD/Tape		Shift + 9
	9 Video 2		9
	>10/Shift/-/- MD/Tape		Guide / EPG / -/-
	>10/Shift/-/- Video 2		Shift + 0
	0 MD/Tape		Fav / Marker / PC
	0 Video 2		0
	Enter/D.Tuning/Return MD/Tape		Shift + OK
	Enter/D.Tuning/Return Video 2		OK
	I<< MD/Tape		I<< / Preset-
	I<< Video 2		Shift + I<< / Preset-



