



 


 
 

 

 


 
 
 




Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Dimmer		Guide
	Sleep		Sleep
	Bass		Green
	Treble		Blue
	Night		Exit

Originalfernbedienung Ersatzfernbedienung

	Repeat/Freq/Text		Text
	Prog		Shift + Sleep
	A-B		Pre Ch
	Stop		Stop
	Pause/PTY Seek		Pause
	Shuffle/PTY Seek Start		TV/R
	I<</Preset		I<<
	Play		Play
	>>I/Preset Up		>>I
	Menu		Menu
	On Screen		3D
	Set Up		Options
	Top		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Area		Info
	Enhancer		AV
	Mode		D. Menu
	Direct		Red
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Surround		List
	AUX		Media
	USB		Smart
	Subtitle		Subt
	Angle		Format
	Zoom		Shift + Eject
	Audio		Dual

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Repeat/Freq/Text		Text
	Prog		Sleep
	Stop		Stop
	Pause/PTY Seek		Pause
	Shuffle/PTY Seek Start		TV/R
	I<</Preset		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I/Preset Up		>>I
	Up		Up
	Down		Down
	Right		Right
	Left		Left



Down