

 






 
 


 


 

 

 



 


 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subt
	Teletext		Text
	Info		Info
	Recall		Back
	Up		Up
	Left		Left


 


 


 
 
Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	FAV		Pre Ch
	EPG		Guide
	Play List		Smart
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	CH +		Ch +
	CH -		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	I<		I<<
	Stop		Stop
	Rec		Rec
	>		>>
	Page Up	 + 	Shift + Ch +
	Page Down	 + 	Shift + Ch -
	TV/Radio / Source		TV/R
	TV/Radio / Source		AV
	Resolution		Format
	✓	 + 	Shift + Ok
	PIP	 + 	Shift + Down
	PIP Swap	 + 	Shift + Left
	PIP List	 + 	Shift + Right

Originalfernbedienung Ersatzfernbedienung

