



Originalfernbedienung	Ersatzfernbedienung
Power	Power
DSG	Dual
Display	Info
Play CD	Play
Pause	Pause
Stop	Stop
Play	Media
I<< / Tuner -	I<<
>>I / Tuner +	>>I
Play / Rev Tape	Shift + Play
<<	<<
>>	>>
Dir Mode	1
Play Mode	2
Rec	Rec
CD Repeat	Smart
Stereo / Mono	Options

Originalfernbedienung	Ersatzfernbedienung
Tuning Mode	3
Up/Memory	Up
Left/Timer Set	Left
Enter/On/Off	Ok
Right/Timer	Right
Down/Sleep	Down
Down/Sleep	Shift + Power
Vol+	Vol +
Vol-	Vol -

