



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	P/N		Smart
	Open/Close		Eject
	<<		<<
	>>		>>
	Play/Pause		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Setup		Options
	Source		AV
	Info		Info
	Return/Exit		Exit
	CH+		Ch +
	CH-		Ch -
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Slow		Back





**Originalfernbedienung    Ersatzfernbedienung**

	Goto		Media
	Program		Sleep
	Title/TTX		Text
	Audio		Dual
	Subtitle		Subt
	Red/Repeat		Red
	Green/A-B		Green
	Yellow/Menu		Yellow
	Blue/Angle		Blue
	EPG		Guide
	Favorite		Pre Ch
	Tv/Radio		TV/R
	Zoom		Shift + Eject

**Originalfernbedienung    Ersatzfernbedienung**


