




**Originalfernbedienung    Ersatzfernbedienung**

	VHS Power		Power
	Audio		Dual
	TV Power		Shift + Power
	TV AV		Shift + AV
	TV CH +		Shift + Ch +
	TV CH -		Shift + Ch -
	TV Volume +		Vol +
	TV Volume -		Vol -
	Operation Select VHS		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

**Originalfernbedienung    Ersatzfernbedienung**

	9		9
	0		0
	-/-- / ≥10		Guide
	Cancel / Reset		Exit
	CH + / Tracking/V-Lock +		Ch +
	CH - / Tracking/V-Lock -		Ch -
	Input		Media
	Repeat		Text
	I<< Index/Skip		I<<
	>>I Index/Skip		>>I
	<< REW		<<
	>> FF		>>
	Stop		Stop
	Pause / Slow		Pause
	Play		Play
	Menu / Play List		Menu
	Menu / Play List		List





**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Return / Exit		Back
	Prog / Check	+	Shift + Sleep
	i-Timer		Sleep
	Prog Play / Play Mode	+	Shift + Right
	<< JET REW /		Options
	Timer		AV
	DVD-RAM		Format
	Rec Mode	+	Shift + Rec
	Rec		Rec
	VHS Status		Info
	A / Cinema		Red
	B / Off Timer		Green

 
 

 











 


**Originalfernbedienung Ersatzfernbedienung**

	Ext Link		3D





**Originalfernbedienung    Ersatzfernbedienung**

	DVD Power		Power
	Audio		Dual
	TV Power		Shift + Power
	TV AV		Shift + AV
	TV CH +		Shift + Ch +
	TV CH -		Shift + Ch -
	TV Volume +		Vol +
	TV Volume -		Vol -
	Operation Select DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

**Originalfernbedienung    Ersatzfernbedienung**

	9		9
	0		0
	-/-- / ≥10		Guide
	Cancel / Reset		Exit
	Repeat		Text
	I<< Index/Skip		I<<
	>>I Index/Skip		>>I
	<< REW		<<
	>> FF		>>
	Stop		Stop
	Pause / Slow		Pause
	Play		Play
	Direct Navigator / Top Menu		Shift + Menu
	Direct Navigator / Top Menu		D. Menu
	Menu / Play List		Menu
	Up		Up
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Right		Right
	Down		Down
	Functions		Options
	Return / Exit		Back
	Setup		Shift + Options
	DVD-RAM		Format
	DVD Status		Info
	A / Quick OSD		Red
	B / Quick Replay		Green
	Manual Skip		3D

Originalfernbedienung Ersatzfernbedienung