



Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Auto Set		Auto
	Computer 1	+	Shift + Mode
	Computer 2	+	Shift + Auto
	HDMI		Volt / Focus
	Video	+	Shift + Comp / Video
	S-Video		Mode
	Component		Comp / Video
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Select		Enter
	Menu		Menu
	Screen	+	Shift + Volt / Focus
	Keystone	+	Shift + Up
	Lamp	+	Shift + Eco / Aspect

Originalfernbedienung Ersatzfernbedienung

	Info		Help / Info
	Freeze		Freeze / Timer
	No Show		Source
	p-Timer	+	Shift + Freeze / Timer
	Image		3D / Invert
	Aspect		Eco / Aspect
	D.Zoom+		+ / Play
	D.Zoom-		- / Stop
	Vol+		Vol + / Page +
	Vol-		Vol - / Page -
	Mute		Blank / Mute

