




Originalfernbedienung Ersatzfernbedienung

ON/STAND-BY 	On/Standby		Power
AUTO SET 	Auto Set		Auto
COMF 1 	Computer 1	 + 	Shift + Mode
'UTER 2 	Computer 2	 + 	Shift + Auto
HDMI 	HDMI	 	Volt / Focus
VIDEO 	Video	 + 	Shift + Comp / Video
S-VIDEO 	S-Video		Mode
COMPONENT 	Component		Comp / Video
	Up		Up
	Down		Down
	Right		Right
	Left		Left
SELECT 	Select		Enter
MENU 	Menu		Menu
SCREEN 	Screen	 + 	Shift + Volt / Focus
KEYSTONE 	Keystone	 + 	Shift + Up
LAMP 	Lamp	 + 	Shift + Eco / Aspect

Originalfernbedienung Ersatzfernbedienung

INFO. 	Info		Help / Info
FREEZE 	Freeze		Freeze / Timer
NO SHOW 	No Show		Source
P-TIMER 	p-Timer	 + 	Shift + Freeze / Timer
IMAGE 	Image		3D / Invert
ASPECT 	Aspect		Eco / Aspect
	D.Zoom+		+ / Play
	D.Zoom-		- / Stop
	Vol+		Vol + / Page +
	Vol-		Vol - / Page -
MUTE 	Mute		Blank / Mute

